



Socket Ball Valve

with Motorised Actuator



Work on heating systems must only be done by qualified professional personnel and in accordance with the respective applicable regulations, guidelines and rules of engineering.

Refer in particular to:

DIN 18 380 Heating systems and central hot water

heating systems

VDI 2035 Scale formation in water heating sys-

tems

BGV German Professional Association


Regulations


(accident prevention regulations)


(DIN = The German Institute for Standardisation VDI = Association of German Engineers)







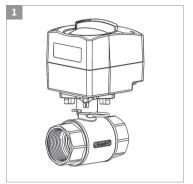

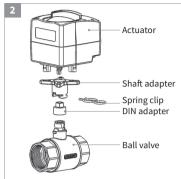


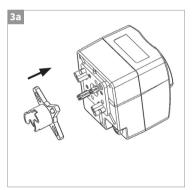

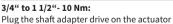


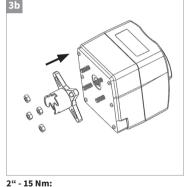


Screw the shaft adapter drive on the actuator

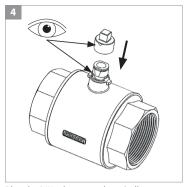


Plug the DIN adapter on the spindle. The marking on the shaft adapter must be parallel to the flank on the spindle.

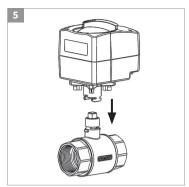

Plug the actuator on the ball valve.

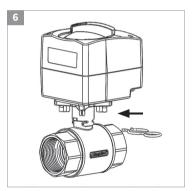

Attach the spring clip to secure the adapter.

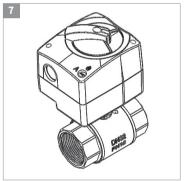

Position display: **Red:** Ball valve is opened, **Blue:** Ball valve is closed

Initially adjust the switch from Auto to Manual for manual actuation.

The illustrations are symbolic and may differ from the respective product. Errors and technical changes reserved.