



## **Product Data Sheet**

## **Tundish**

Open 90° tundish, fitted between the Prescor safety valve and the discharge pipe. It enables you to check through the opening whether the safety valve is discharging excess water.











Туре	Connection		Application	Dimensions		###	Order
	А	В		C [mm]	D [mm]		Code
Tundish $\frac{1}{2}$ (brass)	<sup>1</sup> / <sub>2</sub> " M	<sup>1</sup> / <sub>2</sub> " F	Prescor 1/2", Prescomano 1/2", Prescor B 1/2"	80	55	1	27350
Tundish $\frac{3}{4}$ (brass)	<sup>3</sup> / <sub>4</sub> " M	1" F	Prescor B 1/2", Prescor 3/4", Prescomano 3/4", Prescor Solar 1/2"	94	76	1	27360
Tundish 1 (cast iron)	1" M	1 <sup>1</sup> / <sub>2</sub> " F	Prescor <sup>3</sup> / <sub>4</sub> TRD, Prescor Solar <sup>3</sup> / <sub>4</sub>	185	95	1	27325
Tundish 1 <sup>1</sup> / <sub>4</sub> (cast iron)	1 <sup>1</sup> / <sub>4</sub> " M	1 ½" F	Prescor 1", Prescor Solar 1"	195	100	1	27330
Tundish 1 $\frac{1}{2}$ (cast iron)	1 ½" M	1 ½" F	Prescor 1 $\frac{1}{4}$ ", Prescor S 1 $\frac{1}{4}$ "	205	105	1	27340

## Find more information online:

Manuals
CAD drawings
Extra documentation

Page 1 of 1

